CATCH'EM ALL, HOOK, LINE AND SINKER!



VIDEO MODE Just when you thought it was safe to go back in the water ... Video Mode allows players to torpedo speeding boats and watercraft in an overcrowded lake.




STRETCH THE TRUTH Catching a fish at the left or right target banks lights "Stretch the Truth" lamps for a chance to multiply fish values up to five times (5X) actual score.



ROD AND REEL Shots to the Caster's Club locks balls in the Fishing Reel. Three balls locked starts Multi-Ball® play. One more shot to the Caster's Club starts Jackpot Mode.





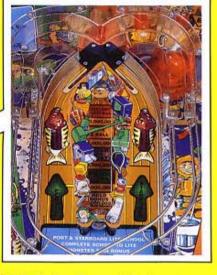

BOAT Making Port and Starboard boat shots lights "Monster Fish" bonus (Hurry-up). The Captive Ball in the center of the boat is advanced by making Long Cast loops. Score lit value by hitting the Captive Ball; values are Hold Bonus, Lite Video Mode, Rock Boat, Lite Extra Ball, and Instant Multi-Ball®.

FEATURING N



- OPTO-FLIPPER BUTTON SWITCH
- COMPUTER-STYLE ELECTRICAL LINE CORD SETS



A subsidiary of

NOTICE: "FISH TALES" is a trademark of Williams Electronics Games, Inc. © 1992 Williams Electronics Games, Inc. All rights reserved.

