

Troubleshooting

The play of a CD does not work.

Make sure that the jukebox is connected to power.
Use only original discs.
Turn on the main panel on „CD-AUX“.
Once you have inserted a CD, activate the „ON / OFF“ switch next to the CD.
Close the hood.

There is no sound/volume control does not work on remote.

Distinguish between total volume and iPod volume.
Explanation: The volume control on the remote and the iPod control panel navigates only the volume of the iPod, using it's own operating system. The controller „Volume“ on the main control panel on the other hand controls the total volume of the musicbox and all the currently playing media.
Important: In order to Try Title of an iPod with 100% device and ipod volume-play. This can harm the speakers of the musicbox and reduce the quality of the music.

With USB/SD - the desired music can not be played.

The system of the musicbox reads only titles in the MP3 format. It automatically detects all the MP3s on the connected media and play them instantly.

With AUX (external source) - the desired music can not be played.

If you want to play music via AUX, this is not taxable on the musicbox. The musicbox in this case serves only as an output module / speaker. With the control „Volume“ you can adjust the volume of the speaker is located in the device.

If you have any questions about the musicbox, contact us! We are happy to help.



A.u.S. Spielgeräte GmbH
Tel.: +43 (0) 1 271 66 00

Important Safety

- 1 Read the instructions carefully before you operate the equipment and to keep taking proper care of these
- 2 All warnings on the product and in the owner's manual should be considered and respected
- 3-Cleaning - Unplug the unit from the power supply before cleaning it. Do not use liquid cleaners or aerosol agent. Clean the appliance with a damp cloth
- 4 Accessories - Do not use a foreign manufacturer accessories - this could cause malfunction
- 5 Water and moisture - Do not use the appliance near water (eg. bathtub, sink, water pipes, moist environments such as swimming pool or similar)
- 6 Accessories - Do not place the unit on any cart, stand, tripod or table. It is possible that the device falls to the ground and hurt people, or damage the device. Any attachment should be recommended by the manufacturer
- 7 Ventilation - Slots and openings in the housing are provided for ventilation of the electronics to protect it from overheating. The openings should never be closed. Furthermore, should not have a bed, sofa, rug or similar in front of the opening. In addition, the device should not be placed on a shelf or similar to ensure optimal ventilation.
- 8 The jukebox should be unplugged during lightning storms or when not in-use of the power supply. This protects all elements of the lighting and the electricity supply.
- 9 Do not plug objects of any kind into slots or openings - this could lead to fire succession. Never spill liquid on the unit - risk of an electric shock
- 10 Service - Perform maintenance or repair of the product by never by yourself. Always contact an electronics technician.
- 11 Replacement Parts - Be shure to use always the original spare parts or replacement parts with the same specifications. Improper replacement parts could damage the jukebox, or increase the risk of fire or an electric shock.
- 12 Heat - The product should never be close to heat sources (such as radiators, heat registers, stoves, or other heat sources) to be established.



Imprint / Publisher

A.u.S. Spielgeräte GmbH
Scheydgasse 48
AT 1210 Vienna
Tel.: +43 (0) 1 271 66 00
Mail: verkauf@aus.at
Mo. to Fr., 9 am - 6 pm



Instruction Manual



Musicbox 105 cm
CD/Radio/iPod/USB/SD/AUX

IMPORTANT

Please read these instructions carefully. It will help you to put this device into operation and to use all specifications. Keep the instructions well.

main control panel



Fig. 1

- Power:** Device On/Off
- Light:** Light On/Off (To turn on the light, the device must be connected to power)
- Volume:** regulates the total volume
- Treble:** controls the high frequencies
- Tuning:** regulates the frequency of the radio
- Bass:** controls the low frequencies
- FM/CD/USB/SD/IP-AUX:** Selection of the desired medium

CD control panel



Fig. 2

- 1.1 CD active/inactive
- 1.2 Play/Pause
- 1.3 Stop
- 1.4 previous track
- 1.5 next track
- 1.6 iPod active/inactive *
- 1.7 Color selection **
- 1.8 repeat track
- 1.9 random track
- 1.10 CD programming***

* see „iPod control panel“ ** for device-lightning *** see „CD programming“

CD programming



Fig. 3

Programming a particular sequence of songs. This is while the music playback not possible.

1. Press the „STOP“ button.
2. Now press the „PROGRAM“ button. Select a title (with „PREV“ and „NEXT“) and press „PROGRAM“.
3. Select another title and press Enter after each selection the „PROGRAM“ button. When you have completed your selection, press „PLAY“.

iPod/iPhone control panel



Fig. 4

To play the music of an iPod, it is first necessary to turn the control on the main panel on IP-AUX (Fig. 1) and set the side attached switch (Fig. 5) to „iPod“. Now the iPod control lamp lights up (Fig. 2, 1.6). After you've plugged your iPod, here's how to control playback from the control panel:

- 2.1 Play/Pause
- 2.2 previous track
- 2.3 next track
- 2.4 increase volume
- 2.5 reduce volume
- 2.6 set menu „back“
- 2.7 set menu „up“
- 2.8 set menu „enter“
- 2.9 set menu „down“
- 2.10 random track

Playing the music of an iPod and an iPhone is both possible. The iPod control panel directly controls the operating system of the iPod / iPhone.

Playback from USB/SD/AUX



Fig. 5

USB / SD: Turn the knob on the main control panel on USB/SD (Fig. 1). Plug in your USB device or SD / MMC card on the side of the jukebox. The controller is also on the side. Once the medium is detected, an LED lamp lit on.

AUX: Turn the knob of the main panel on IP-AUX (Fig. 1) and set the switch attached to the side (Fig. 5) to AUX. To the right you will find the necessary connections.

Remote control

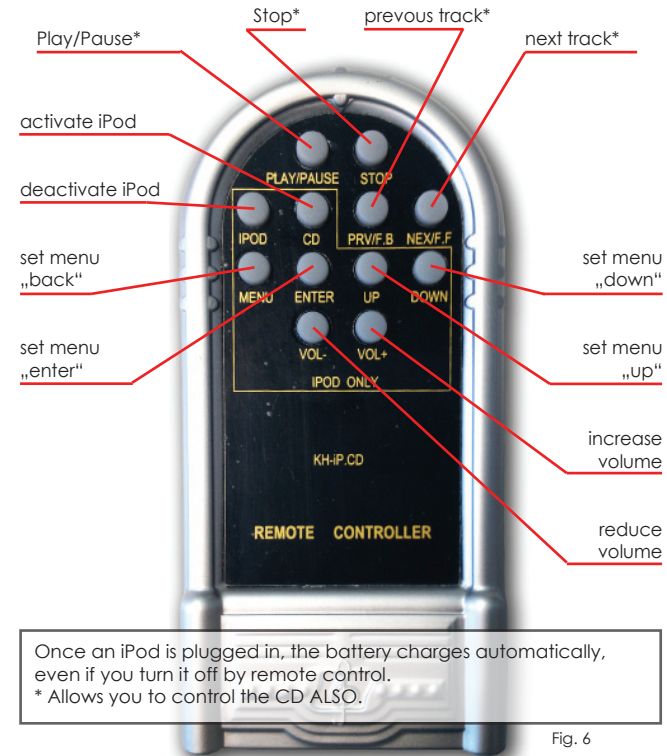


Fig. 6

Once an iPod is plugged in, the battery charges automatically, even if you turn it off by remote control.
* Allows you to control the CD ALSO.