

PM02071 Security Plug Removal



A.u.S. Spielgeräte GesmbH
Scheydgasse 48 A-1210 Wien
Tel. +43-1-271 66 00 Fax.+43-1-271 66 00 75
E-mail: verkauf@aus.at
<http://www.aus.at> <http://www.garlando.at>
Öffnungszeiten: Mo-Do 9-18 und Fr. 9-17 Uhr

IN THIS GUIDE YOU WILL BE SHOWN HOW TO REMOVE THE PM02071 TO ALLOW THE USE OF VERTICAL POSITION BEZELS.

YOU WILL REQUIRE A FLAT HEAD SCREWDRIVER / SLOTTED SCREWDRIVER. *PICTURED BELOW*




PM2071 Security plug installed in a NV9USB.



Please follow the instructions below to remove the Security Plug.

1 Push in between the grey and black plastic try to aim for the centre of the plug like in the picture below. Please be aware it may require a little force to make the screwdriver to slip between the Plug and NV9USB.

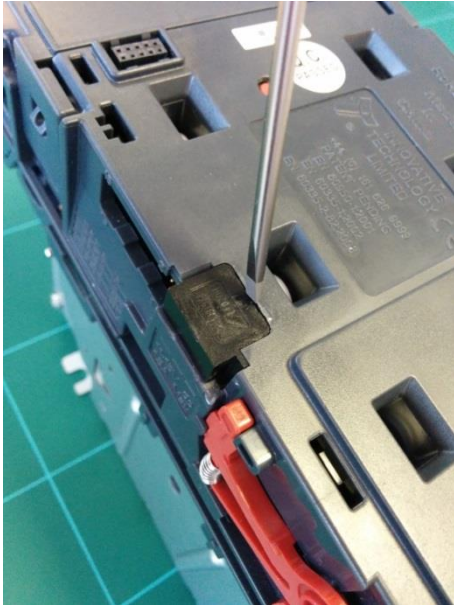

1 LEAVER THE SCREWDRIVER OVER UNTIL THE PLUG HAS LIFTED. IT WILL POP OUT OF PLACE.



3 ONCE IT HAS LIFTED IT CAN BE REMOVED BY HAND.

